

# Preset12 Cheat Sheet

## To Enter Set Up

Remove power.  
Press firmly and hold buttons 1 and 7.  
Apply power.  
Release buttons. LEDs will chase to confirm set up mode.

## To Set Preset12 to Factory Defaults

Press 12 then press 7. This does not erase the presets.

## To Set Predefined Grouping Options (Factory default is all in the same group)

Press 1 then:  
Press 1 to set all presets to the same group (Original Preset 10 functionality).  
Press 2 to set all presets to their own group (Original P.O.P.O functionality).  
Press 3 to group presets 1-6 together and, 7-12 together (two sets of radio buttons).  
Press 4 to make 1-6 independent (each alone in its group), and the rest grouped together.

## To Set an "ALL-OFF" Button (Factory default is button 12 is all-off)

Press 1, then press 12, then press the button to be an all-off preset.

## To Set All Fade Times the Same (Factory default is two seconds)

Press 2 then enter a two digit fade time (use button 10 for zero, button 11 for decimal point).

## To Lock/Unlock All Presets (Factory default is all unlocked)

Press 3 then:  
Press 1 to unlock all presets (any preset can be recorded at any time).  
Press 2 to lock presets if DMX512 is absent (only recordable from external DMX512 source).  
Press 3 to lock presets if DMX512 is present (only recordable from other Preset12 presets).  
Press 4 to lock all presets (presets must be unlocked here in set up before they can be altered).

## To Select Main/Remote Operation (Factory default is stand-alone)

Press 6 then:  
Press 1 if this is the only Preset12 in the system (stand-alone mode).  
Press 2 if this is a Main station with Remote station(s) in the system.  
Press 3 if this is a Remote station which will remotely control the Main station.

## To Create A Custom Preset Group

Press 7 then:  
Press the first preset in the group.  
Press other presets in the group.  
Press the first preset in the group again; this ends this group.

## To Set the Fade Time For A Single Preset

Press 8 then:  
Press the chosen preset.  
Enter a two digit fade time (use button 10 for zero, button 11 for decimal point).

## To Lock/Unlock a Single Preset

Press 9 then:  
Press the chosen preset, then:  
Press 1 to unlock this preset (this preset can be recorded at any time).  
Press 2 to lock this preset if DMX512 is absent (only recordable from external DMX512 source).  
Press 3 to lock this preset if DMX512 is present (only recordable from other Preset12 presets).  
Press 4 to lock this preset (preset must be unlocked here, in set up, before it can be altered).

## To Select Loss-Of-DMX behavior (Factory default is fade to Preset12's last look)

Press 12 then:  
Press 1 to hold the external DMX512 look upon loss of the external source.  
Press 2 to fade to the most recent Preset12 look upon loss of the external DMX512 source.

## To Exit Set Up

Cycle power or Press 12 then Press 12 again.